

LubeSite 300 Series

Grease, Metal Base



General

LubeSite 300 Series are designed for applications subject to vibration, impact, shock, high-torque or centrifugal forces. Units are assembled with medium springs (three additional light and heavy springs are included in each box of ten). An extra heavy (orange) spring is available for applications requiring the use of an extension or for higher pressure flushing applications. LubeSite unit 360 is individually boxed with a light (blue) and heavy (red) spring.

Application

LubeSite 300 Series can be used on any equipment that has:

- + Anti-friction oscillating, ball or roller bearings
- + Shielded bearings with seals
- + Bronze, oilite or open bearings
- + Requires bearing flushing action

Operation

LubeSite automatic grease feeders have only two moving parts (spring, piston with metering rod and piston seal ring). The design combines foolproof simplicity with rugged component strength for dependable, controlled lubrication.

The graduated channels in the meter rod allow the bearing to use grease as required. Once the reservoir is filled and the unit is connected to a bearing, the single-point lubricator uses Venturi action to discharge lubricant only when the bearing is in motion. Thus, grease is never packed into the bearing. This benefits manufacturers that will have some planned machine downtime, because over-lubrication is eliminated. Because the single-point lubricator only generates 1-5 psi it will not blow bearing seals. When the bearing stops, so does the grease flow.

Technical Data

Material	Domes	Polycarbonate
	Bases	Lightweight anodized aluminum
Grease	NLGI grade 0 to 4 non-separating	
Thread Size	1/8" NPT	
Operating Temperature	-10°F to 250°F (-23°C to 121°C)	



ATTENTION

LubeSite 300 Series (metal base) units for dynamic, impact, high torque or vibrating applications.

See Brochure #L713: LubeSite Systems for more information

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
(800) 631 0168 TOLL-FREE
(919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
Morrisville, NC 27560

Start Up Instructions

1. Use proper spring: Every LubeSite unit comes factory-equipped with medium spring (silver) which gives correct grease feeding pressure for most applications. A lightweight spring (blue) and a heavyweight spring (red) are available. Consult the spring selection guide (page 3) to determine the proper spring.
2. Remove grease fitting from equipment or bearing housing: Check to see that the thread on the grease fitting is 1/8". You may need another LubeSite adapter to mount the LubeSite unit (refer to accessories).
3. Fill LubeSite unit with a non-separating grease: Connect a grease gun to the side grease fitting. Fill with grease until the grease comes out of the base coupler. First filling may be above caution line to assure no air pockets. Outlet must be unobstructed as over-pressuring can result in top separating from base which can cause serious head or eye injury. Mount the LubeSite unit on equipment immediately.
4. Screw the LubeSite assembly directly into the grease fitting hole: Turn hand tight only.
5. LubeSite can be refilled while mounted on equipment: This should be accomplished before the seal ring is down on the top of the base. Simply refill by attaching the grease gun to the grease fitting and fill until the seal ring rises to the bottom edge of the caution label.

WARNING

Do not overfill! Overfilling can cause over-pressure which can result in top separation from base which can cause serious head or eye injury.

For refilling hard to reach applications, use the LubeLine remote refill line.

Maintenance

LubeSite units are made from high-quality, heavy-duty engineered materials and are manufactured to meet rigid standards. These units require only minimum care to provide long, trouble-free service under normal operating conditions.

The transparent dome should be kept free of exterior dirt, so that the interior grease level can always be seen. Most dirt can easily be removed with mild detergents (never use solvents). Grease fittings should be wiped clean before and after filling and the protective cap replaced.

We recommend that the LubeSite unit be thoroughly cleaned inside and out about once a year as a routine, or whenever the grease has separated or solidified. More cleaning may be required in extremely dirty or dusty environments

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
(800) 631 0168 TOLL-FREE
(919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
Morrisville, NC 27560

Selecting the Proper Unit Size

To determine the LubeSite unit size, you need to know the bearing shaft diameter and speed, as well as the bearing class. For example, if the shaft diameter is 2", the bearing is sealed and the shaft speed is a continuous 2000 rpm, you will need an extra large unit.

LubeSite Size Selection Guide

Bearing Shaft Diameter	Up to 1-1/2"			
Operating Condition	Intermittent		Continuous	
Class of Bearing	Open	Sealed	Open	Sealed
Under 2500 rpm	1 oz	1 oz	1 oz	1 oz
Over 2500 rpm	2 oz	2 oz	2 oz	2 oz
Bearing Shaft Diameter	Over 1-1/2"			
Under 1000 rpm	2 oz	2 oz	2 oz	2 oz
1000-2500 rpm	2 oz	2 oz	6 oz	6 oz
Over 2500 rpm	6 oz	6 oz	6 oz	6 oz

Note: Bigger isn't always better. Don't intentionally oversize LubeSite units.

Selecting the Proper Spring Size

To determine the proper spring, you need to know the operating temperature and the grease weight. For example, if the operating temperature of the bearing ranges from 60°F to 80°F, and you're using grade 2 grease, then you will need a medium (silver) spring. See the spring selection guide below. If mounting on an extension, use of an extra heavy (orange) spring may be required (spring effectiveness will vary with application).

LubeSite Spring Selection Guide

Operating Temperature	Grease (Grade)				
	0	1	2	3	4
-10°F to 40°F (-23°C to 4°C)	Blue	Silver	Red	---	---
40°F to 110°F (4°C to 43°C)	Blue	Silver	Silver	Red	---
110°F to 200°F (43°C to 93°C)	---	Blue	Silver	Silver	Red
200°F to 250°F (93°C to 121°C)	---	---	Blue	Silver	Red

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
 (800) 631 0168 TOLL-FREE
 (919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
 Morrisville, NC 27560

How to Order

Name	Reservoir Capacity	Part #
LubeSite 300 Series	1 oz (28.3 g)	302
	2 oz (56.7 g)	305
	6 oz (170.1 g)	360

When ordering, specify by name, description and part number, e.g. LubeSite 300 Series, 2 oz Reservoir Capacity, Part #305.

Springs

Color	Strength	Part #		
		LubeSite 302	LubeSite 305	LubeSite 360
Blue	Light	202-7	205-7	360-7
Silver	Medium	202-8	205-8	360-8
Red	Heavy	202-9	205-9	360-9
Orange ¹	Extra heavy	202-15	205-15	360-15

¹ Available for 1 oz, 2 oz and 6 oz grease feeders to be used on extension and where greater pressure is desired for flushing action.

Adapters & Couplers

Name	Description	Material	Part #
Adapter	Straight, 1/8" NPT (F) x 1/4"-28 (M)	Zinc plated steel	20-1
		Nickel chrome plated	50-1
	Bushing, 1/8" NPT (F) x 1/4" NPT(M)	Zinc plated steel	20-2
		Nickel chrome plated	50-2
	45°, 1/8" NPT (F) x 1/8" NPT(M)	Zinc plated steel	20-3
		Nickel chrome plated	50-3
	45° 1/8" NPT (F) x 1/4"-28 (M)	Zinc plated steel	20-6
		Nickel chrome plated	50-6
	90°, 1/8" NPT (F) x 1/4"-28 (M)	Zinc plated steel	20-4
		Nickel chrome plated	50-4
	90°, 1/8" NPT (F) x 1/8" NPT(M)	Zinc plated steel	20-5
		Nickel chrome plated	50-5
Coupler	Base, 1/4" NPT (F) x 1/8" NPT(M)	Zinc plated steel	202-2
		Nickel chrome plated	502-2
	1/4" NPT (F) x 1/4"-28 (M)	Zinc plated steel	202-2A

For additional accessories, see Brochure #L713: LubeSite Systems.


BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
 (800) 631 0168 TOLL-FREE
 (919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
 Morrisville, NC 27560

Dimensional Schematics

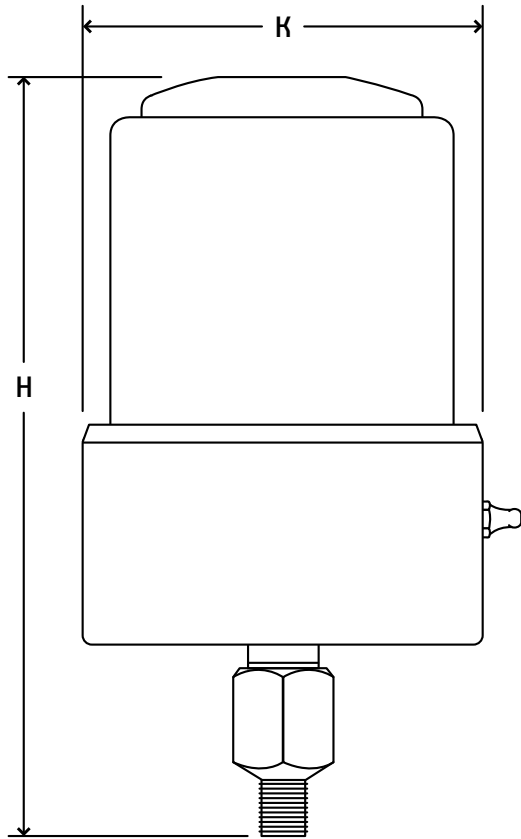

Part #	H	K
302	3.625" (92.1mm)	1.75" (44.5mm)
305	4.625" (117.5mm)	2.375" (60.3mm)
360	6.00" (152.4mm)	3.00" (75mm)

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
(800) 631 0168 TOLL-FREE
(919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
Morrisville, NC 27560